




# DELL LAPTOP RETROFIT FRONT CLAMP KIT VERSION 1

## User Guide

This user guide is for the following kit:


Description	PMT Part #
Dell Laptop Retrofit Front Clamp Kit Version 1	AS7.D900.004

# Installation Steps

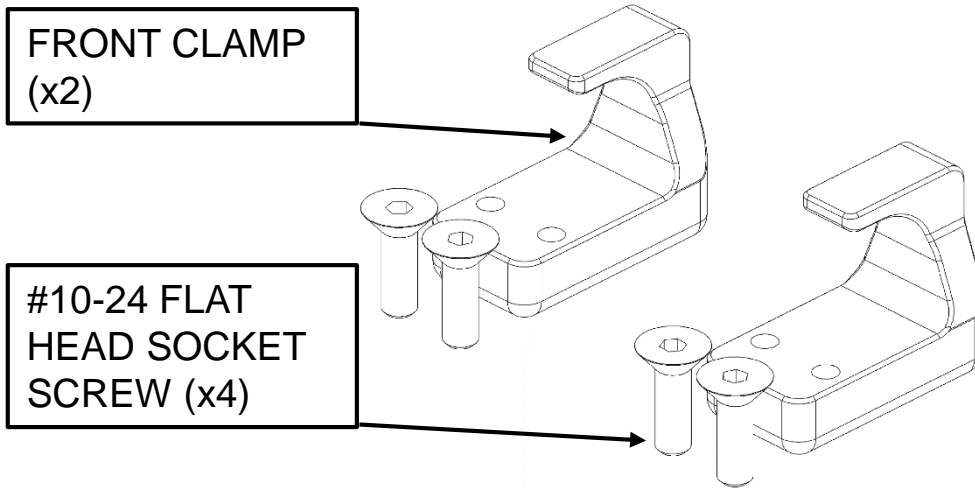


## Step 1:

Remove the existing 2X front clamps by removing the 3X #10-24 flat head socket screws on each side. Use a 1/8" allen key or hex drive to remove the screws

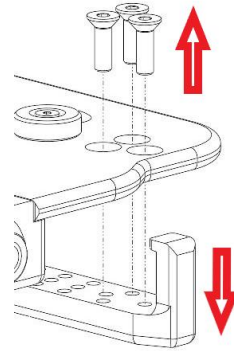

## Step 2:

Replace the old clamps with the new hooks that came in the hardware bag. Use the 2X #10-24 screws on each side from Step 1 to install the new front clamps. NOTE: If the existing hardware got stripped in step 1, use the hardware provided in the hardware bag for step 2

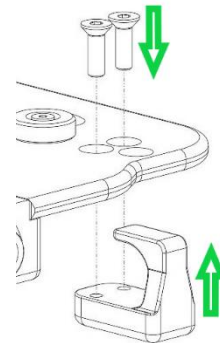

## Step 3:

Save the old clamps for any future use for other laptop models