




# DELL LAPTOP RETROFIT FRONT CLAMP KIT VERSION 2

## User Guide

This user guide is for the following kit:

Description	PMT Part #
Dell Laptop Retrofit Front Clamp Kit Version 2	AS7.D900.005

# Installation Steps

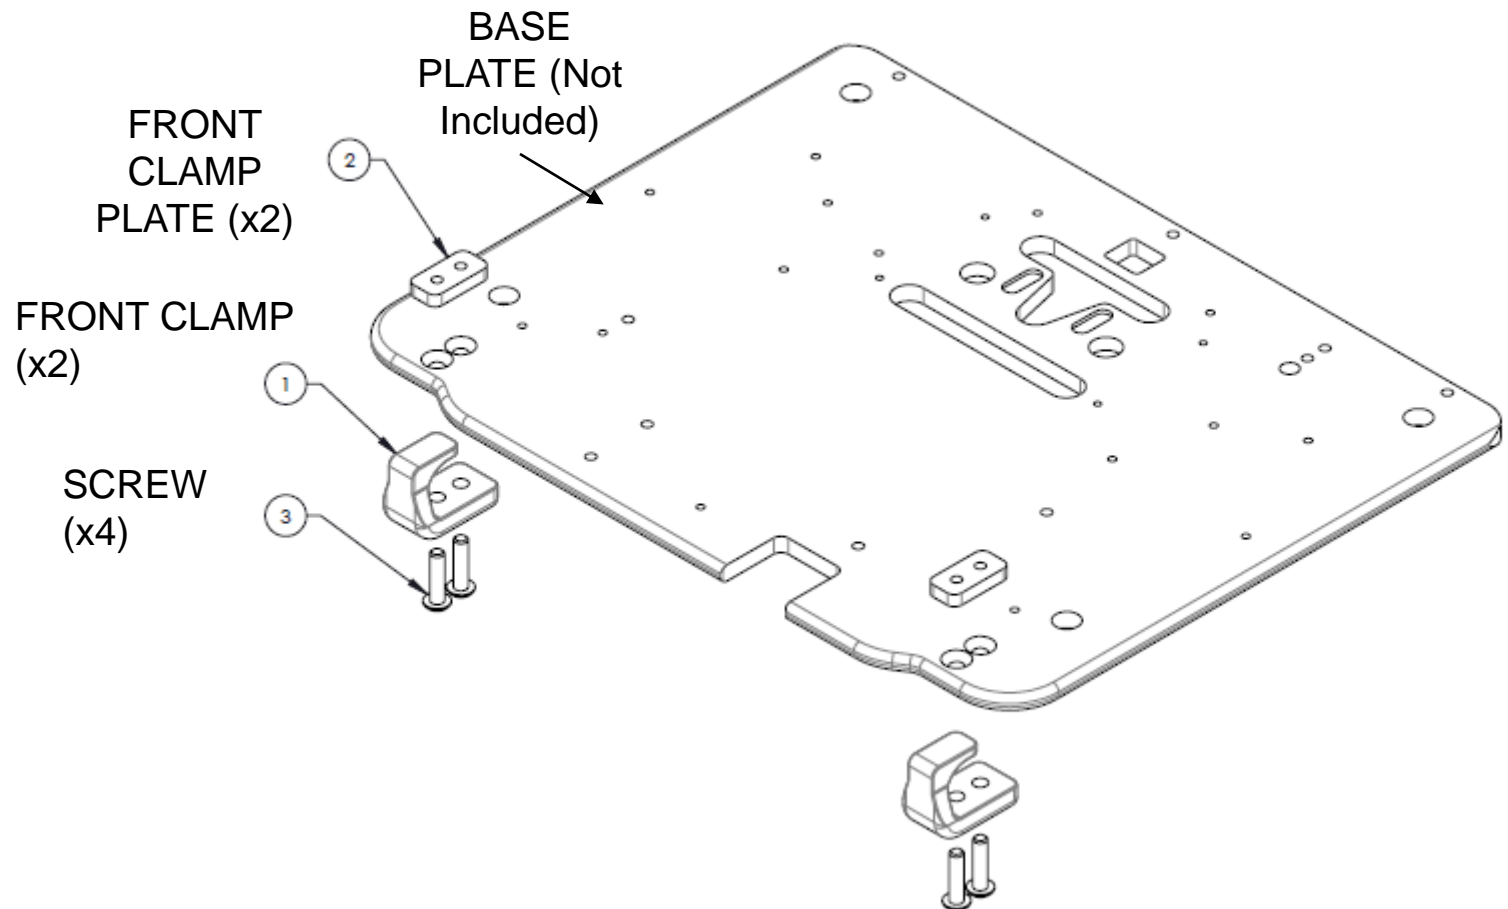

## Step 1:

Pass the included screws (item 3) through the Front Clamp (item 1). Use Loctite 242 or equivalent.

## Step 2:

Place the Front Clamp Plate (item 2) on top of the main dock Base Plate above the two holes near the front of the docking station as shown above. Align the holes in the Front Clamp Plate with the holes in the main dock Base Plate.

## Step 3:

Thread the screws through the Front Clamps, through the main Base Plate and into the Front Clamp Plates. Don't fully tighten at this time.

## Step 4:

Place laptop into dock, then fully tighten screws using a 1/8" allen/hex wrench.