



# INSTALLATION INSTRUCTIONS

## Product

7160-1560


## Revision

Rev A

## Form

INST-1017

INSTRUCTION SHEET- 2021+ TAHOE POLY WINDOW GUARD **Printing Spec:** PS-001

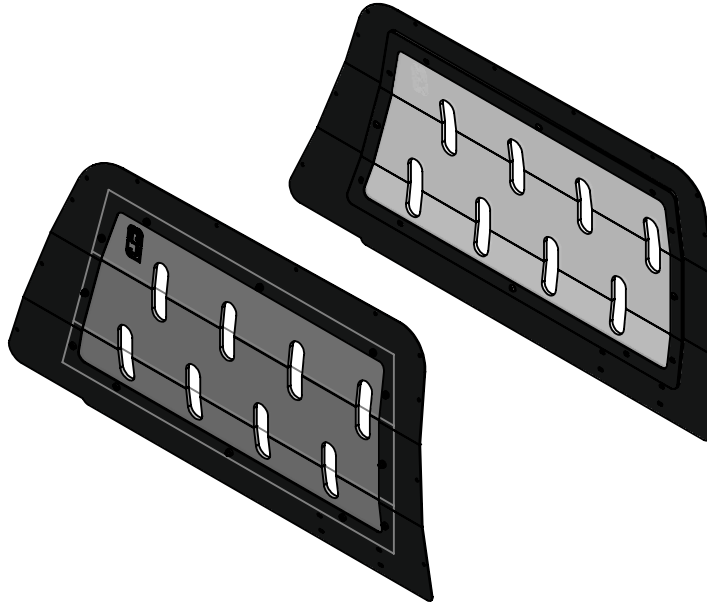

## TO INSTALL POLY WINDOW BAR

1. Remove the cover on the Poly window. Using the additional ¼-20 Button Head Socket provided in the hardware bag, attach the polywindow in between the metal part. Repeat the same step for other (driver/passenger) set too.
2. Place the correct side guard on the door's window frame and position the unit so it matches the window frame profile from inside the vehicle.
3. Use the #10-16 self drilling hardware provided and mounts it to the window frame.
4. Repeat for each side

**NOTE:** To install lights onto window bar, 7160-1594 has universal light mount bracket which will be installed to holes provided on window bar.

### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2021 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868